


# PEACHTREE<sup>®</sup>


DOORS AND WINDOWS

## CASEMENT HARDWARE TRIM SET INSTALLATION INSTRUCTIONS

1. Place handle trim piece over handle and hold in place. Handle trim piece half-circle cut out fits over half round button on handle.

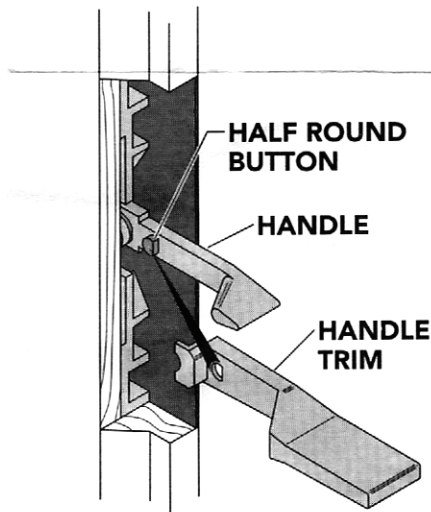

2. Slide fascia into outside openings on latch housing. **DO NOT ROTATE INTO PLACE.**

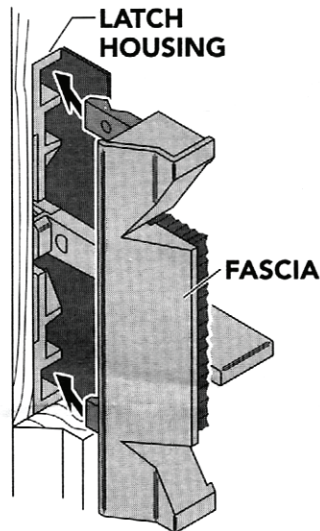

3. Rotate handle trim up to unlock and down to lock.

4. Slide crank handle on operator shaft and tighten screw in crank handle to secure.

